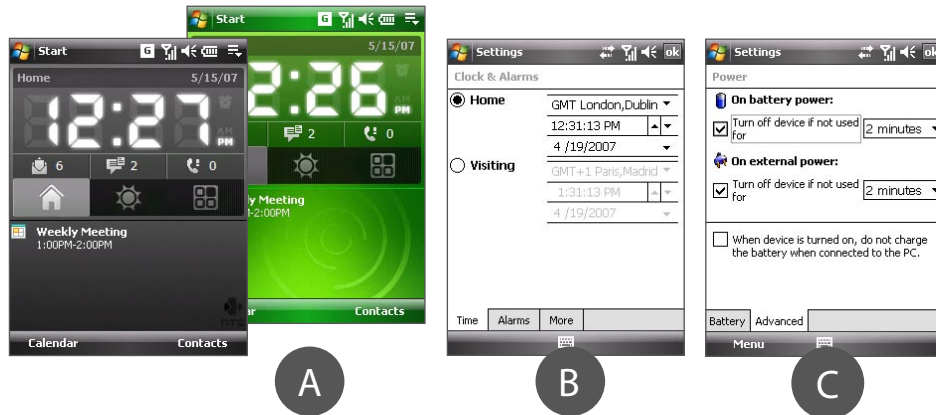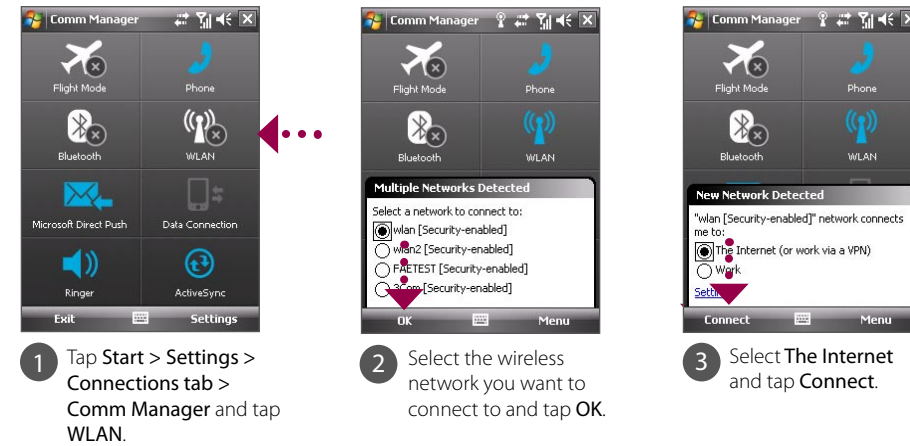# Personalize Your Device

A. **Change the Today screen background**

    Tap **Start** > **Settings** > **Personal** tab > **Today.**

B. **Set the date and time**

    Tap **Start** > **Settings** > **System** tab > **Clock & Alarms** > **Time** tab.

C. **Manage power settings**

    Tap **Start** > **Settings** > **System** tab > **Power** > **Advanced** tab.

A

B

C

Go Online and Surf the Web

You can use Wi-Fi® to connect your device to the Internet.

Note   If there is no Wi-Fi hotspot in your area, you can still connect to the Internet by using the GPRS/EDGE or dial-up service of your wireless service provider. Refer to the User Manual for details.

1   Tap **Start** > **Settings** > **Connections tab** > **Comm Manager** and tap **WLAN.**

2   Select the wireless network you want to connect to and tap **OK.**

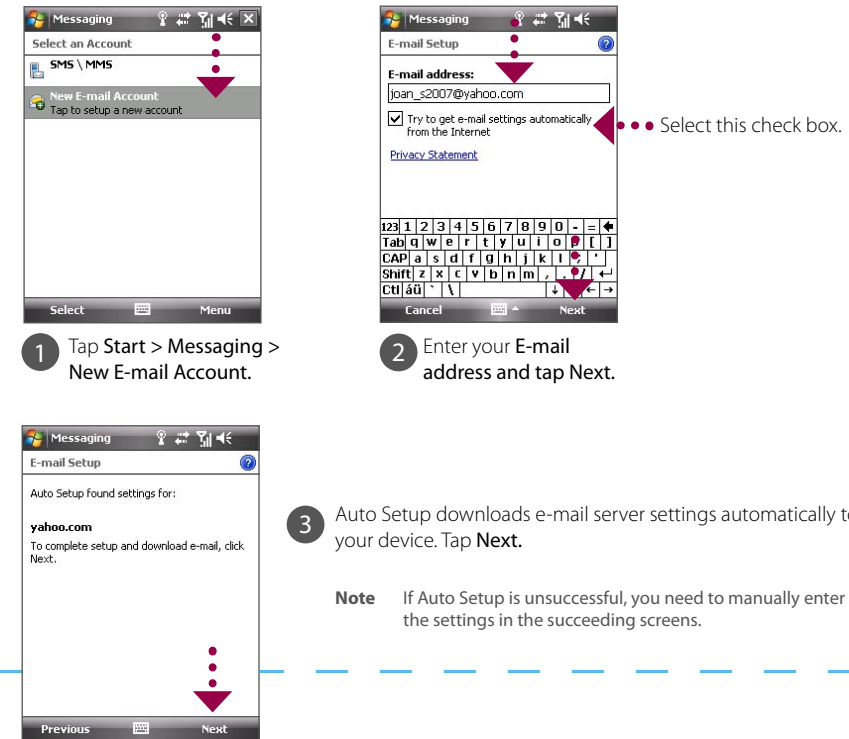**3**   Select **The Internet** and tap **Connect.**

If you are connecting to a secured network, you may need to enter a network key before you can connect to it.

Use Internet Explorer® Mobile (tap **Start** > **Internet Explorer**) to surf the Web.


Get E-mail On Your Device

Get e-mail messages on your device. Set up your device so you can send and receive e-mail messages using your favorite e-mail service.
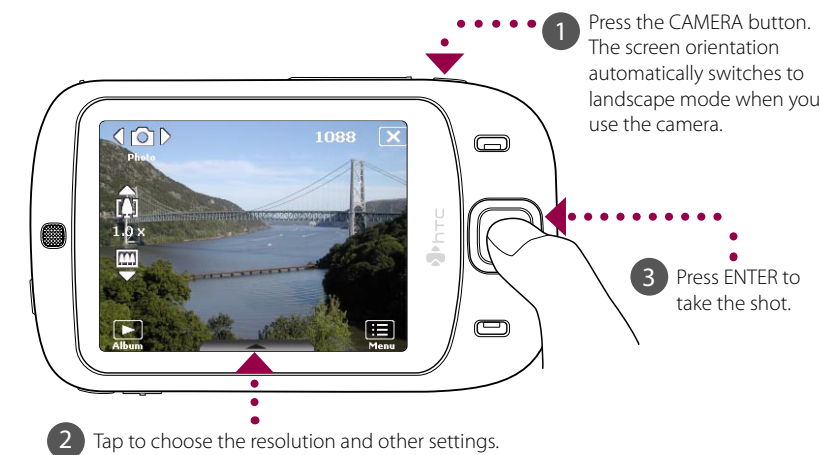
Select this check box.

1   Tap **Start** > **Messaging** > **New E-mail Account.**

2   Enter your **E-mail** address and tap **Next.**

3   Auto Setup downloads e-mail server settings automatically to your device. Tap **Next.**

Note   If Auto Setup is unsuccessful, you need to manually enter the settings in the succeeding screens.

4   Enter **Your Name** and **Account display name.** Tap **Next.**

5   Enter your **User name** and **Password** for the e-mail account. Tap **Next.**

6   Choose how frequent you want your device to automatically send and receive e-mail. Tap **Finish.**

You can also synchronize your device with your company's Exchange Server so you can access your company e-mails.

Refer to the User Manual to learn how to get your company e-mails on your device.

---

htc TOUCH™ Read Me First

This **Read Me First** will help you get started with using your Windows Mobile® 6 powered device. We recommend that you have this guide handy when you start using your device.

For a more complete reference, consult the User Manual that came with the device.
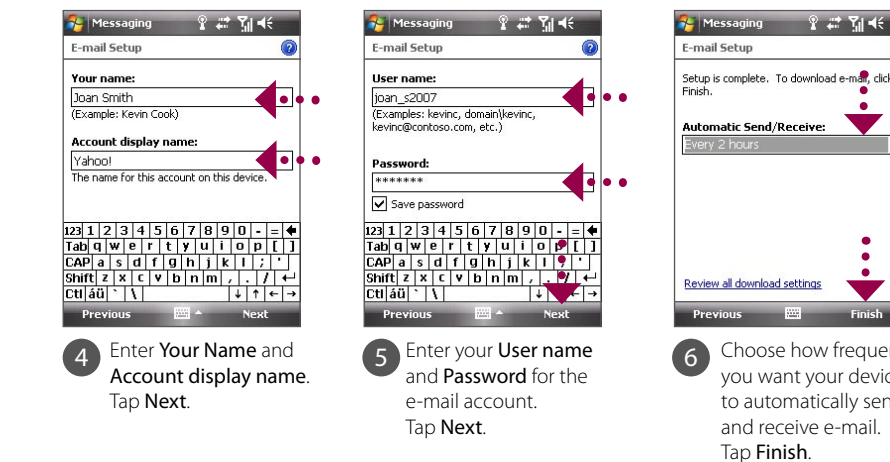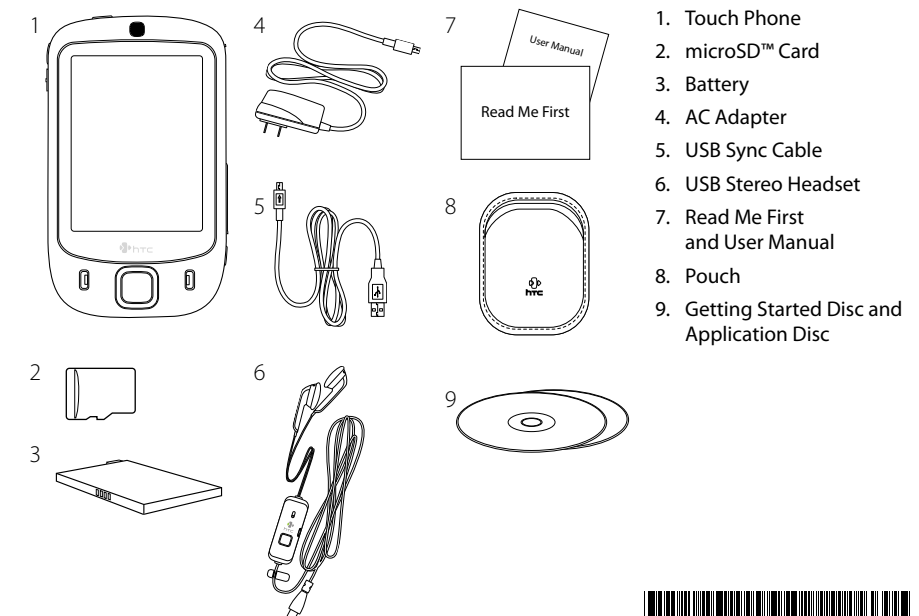

Secure Your Device

A. **To enable SIM lock**

    Enabling the SIM lock requires you to enter a PIN code first before you can use the phone features of your device.

    You can enable the SIM lock by tapping **Start** > **Settings** > **Personal** tab > **Phone** and selecting **Require PIN when phone is used**.

B. **To enable device password**

    Enabling the device password requires you to enter a password to unlock the device after it has been left idle for a set period of time.

    1. Tap **Start** > **Settings** > **Personal** tab > **Lock**.

    2. Select the **Prompt if device unused for** check box and enter the time you want.

    3. Select the **Password** type.

    4. Enter and confirm the password, then tap **OK**.

C. **To enable key lock**

    Enabling key lock helps prevent accidental key presses when the device is in your pocket or bag.

    Lock the keys by tapping the **Launcher** tab ( ) on HTC Home and then tapping .

    To unlock, tap **Unlock**.

Take a Photo

Use the Camera of your device to capture those precious moments.

1   Press the CAMERA button. The screen orientation automatically switches to landscape mode when you use the camera.

2   Tap to choose the resolution and other settings.

3   Press ENTER to take the shot.

The photo will be saved to the My Pictures folder, unless you choose to delete it (by pressing) after taking the photo). Press if you want to send the photo via MMS or e-mail. Refer to the User Manual for more information about using the Camera.

What's in the Box

These are the items that you should find inside the box.

1. Touch Phone
2. microSD™ Card
3. Battery
4. AC Adapter
5. USB Sync Cable
6. USB Stereo Headset
7. Read Me First and User Manual
8. Pouch
9. Getting Started Disc and Application Disc

www.htc.com

90H00xxx-xxM Rev.A

▶ Before Using Your Device

A. Remove the back cover

Slide the back cover upward to remove it.

B. Install the battery

Insert the right side of the battery first, with the gold contacts facing to the right, then gently push the battery into place.
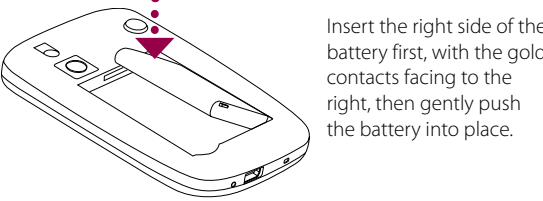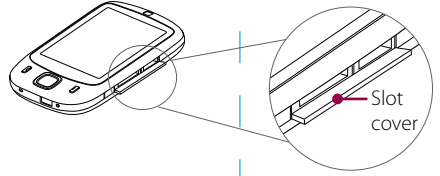
C. Install the microSD™ card and SIM card

1 Pry open the cover that houses the SIM and storage card slots. To open the cover easier, pry it open from both ends.

2 Flip your device so that the touch screen faces upward.

**3** Hold open the slot cover with one hand.

Slot cover

4 The upper slot is the microSD slot. Insert the microSD card into this slot with gold contacts facing down.

5 The lower slot is the SIM card slot. Insert the SIM card with its gold contacts facing down and its cut-off corner facing toward the inside of the slot.

Note To remove the SIM card or microSD card, press it to pop it out of the slot.

**6** Replace the back cover.

D. Charge the battery

The battery is not fully charged out of the box. To charge the battery inside your device, connect the AC adapter plug to an electrical outlet and connect the USB end to the Sync connector at the bottom of your device. The battery is fully charged after about 3 hours of charging.
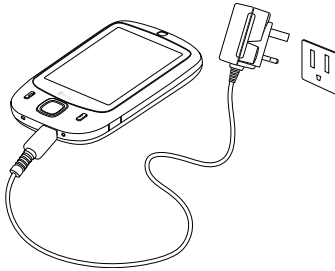
E. Power on/off the device

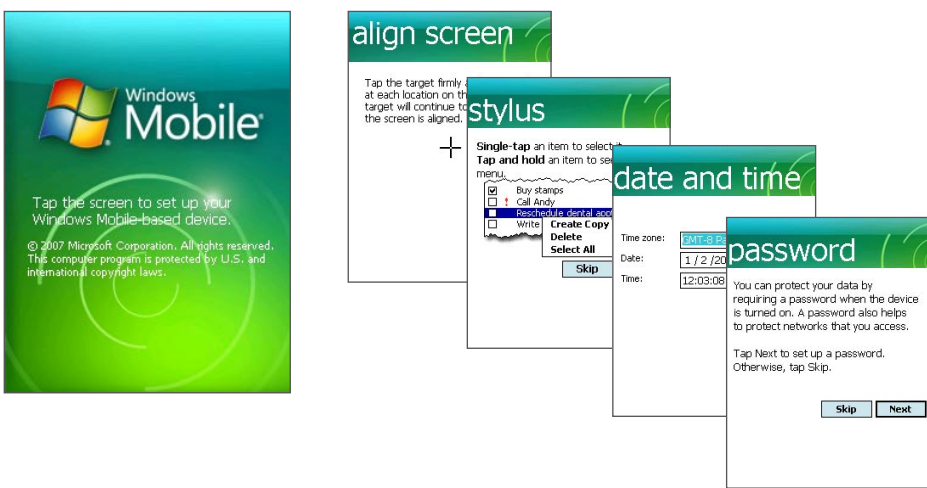Press and hold the POWER button for about 3 seconds to power on your device.

When powering off, a confirmation message will be displayed. Tap **Yes** to power off the device.
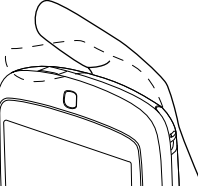
◉ Quick Setup Wizard

When you power on your device for the first time, a Quick Start Wizard will guide you through touch screen calibration, provide a quick tutorial on stylus operation and pop-up menus, and allow you to set the date, time and a device password.

Follow the on-screen instructions to complete the wizard.

align screen

Tap the target firmly and accurately at each location on the screen. The target will continue to move until the screen is aligned.

stylus

Single-tap an item to select it. **Tap and hold** an item to see a menu.

Buy stamps
Call Andy
Reschedule weekly...
Write
Create Copy
Delete
Select All

date and time

Time zone: GMT-8 P...
Date: 1 / 2 /20...
Time: 12:03:08

Skip

password

You can protect your data by requiring a password when the device is turned on. A password also helps to protect networks that you access.

Tap Next to set up a password. Otherwise, tap Skip.

Skip **Next**

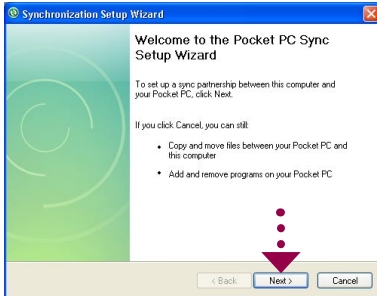# ◎ Synchronize Your Device and PC

Synchronize your device with your PC to keep information such as Outlook e-mails, contacts, tasks, and appointments up-to-date on your device.

Set up synchronization software on your PC

Depending on the Operating System of your PC, you will need either Microsoft ActiveSync® 4.5 (or later) or Windows Mobile® Device Center to synchronize your device with your PC.

Set up ActiveSync on Windows XP

1 Install ActiveSync 4.5 on your PC from the Getting Started Disc.

2 Connect your device to your PC. The Synchronization Setup Wizard automatically starts and guides you to create a synchronization partnership. Click **Next** to proceed.

3 To synchronize your device with your PC, clear the **Synchronize directly with a server running Microsoft Exchange** check box and click **Next**.
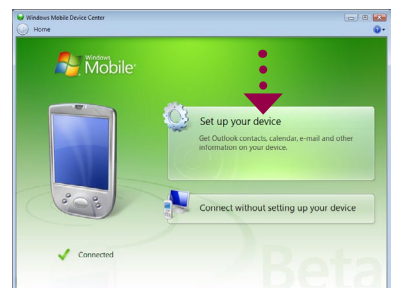
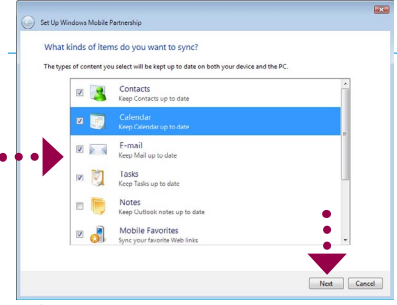**4** Select the information types that you want to synchronize, then click **Next**.

5 Choose whether to allow wireless connections while your device is connected to the PC.

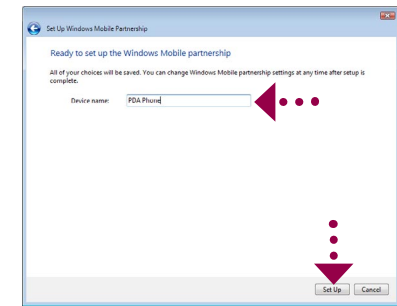**6** Click **Finish**.

Set up Windows Mobile Device Center on Windows Vista™

1 Connect your device to your PC. In Windows Mobile Device Center, click **Set up your device**.
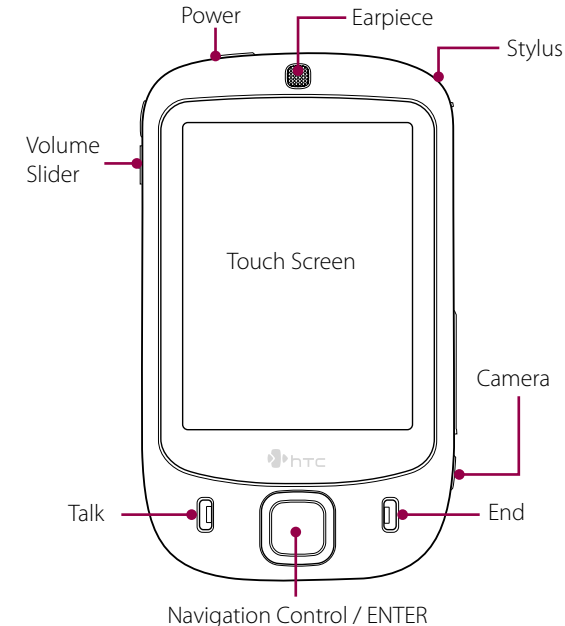
2 Select the information you want to synchronize and click **Next**.

3 Type in a name for your device and click **Set Up**.

The Touch Phone

Power
Earpiece
Stylus
Volume Slider
Touch Screen
Camera
Talk
End
Navigation Control / ENTER

HTC Home

HTC Home is a Today screen plug-in that gives you up-to-date local information at a glance, such as time, day and weather information, and shows new messages and missed calls.

It also has a customizable launcher where you can add your favorite applications for one-touch access.

TouchFLO™

TouchFLO™ gives you better touch panel experience on your device. Using TouchFLO, you can easily scroll and pan the screen by sliding your finger on the touch panel. TouchFLO also has the Touch Cube where you can add your favorite contacts, access media, launch programs, and more.

Finger scrolling

While on a Web page, document, or list (such as contacts list, file list, etc.), slide your finger upward to scroll down; slide your finger downward to scroll up.

To scroll to the right, slide your finger to the left. To scroll to the left, slide your finger to the right.

Finger panning

Touch and hold on the touch screen and then drag your finger around the screen.

Touch Cube

To open the Touch Cube, slide your finger upward, starting from the bottom of the touch screen where it shows a logo image.

To close the Touch Cube, slide your finger downward.

Touch Cube is a three-dimensional, cubic user interface. To flip the interface from one side to another, slide your finger left or right on the touch screen.
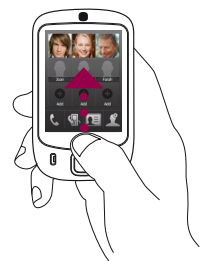
Opening the Touch Cube

☎ Make that First Call

1 Press the TALK button to open the Phone screen.

2 Touch or tap the keys on the Phone screen to enter the first few digits of a phone number or the beginning letters of a contact name.

3 The Smart Dialing panel will display the matching phone numbers in Call History as well as the matching contacts found on your device and SIM card. Select the number or contact you want to call then press TALK.

Smart Dialing Panel

TALK Button

For hands-free phone conversation, connect the USB stereo headset or a Bluetooth® headset (not included) to your device.

To learn how to connect a Bluetooth headset, refer to the User Manual.